

— FLEURETTE —



FLEURETTE
CONSTRUCTEUR



— FLORIUM —

CONTENTS

Introduction	Page 2
How to use this manual	Page 3 - 4
Motorhome manners	Page 5 - 6
Water system and gas installation	Page 7 - 13
Fresh Water	
Preparing to travel	
Gas installation	
Heating	
Waste water	
Winterzation	
Tank level	
Electrical system	Page 14 -16
12 V and 220 V supply	
Fuses	
Electrical unit	
Supply diagram	
Equipments	Page 17 - 18
Hotplate	
Extractor hood	
WC	
Refrigerator	
Oven	
Food safety record	Page 19
Laying-outs	Page 20 - 21
Pull-down bed	
Television	
Sunroof	
Dinette sleeping area	
Radio - GPS	Page 22
Quick repair kit	Page 22
Maintenance of the interior (Cushions, windows, mattress....)	Page 23 - 25
Warranty	Page 26
Fleurette dealers in France and Europe	Page 27 - 28

Dear Sir, Madam,

Thank you for having chosen **FLEURETTE** or **FLORIUM** and for your trust in FLEURETTE Company.

Our team has taken great care in preparing your motorhome and we hope it will come to your expectation.

It is very important to read this manual carefully as well as the instructions provided with all the fittings. The information in this book will make you save time and help you to know your new motorhome. To ensure greater comfort and to prevent excessive depreciation of your motorhome, use it properly.

Your dealer should give you the Fiat user manual, the chassis maintenance book when your motorhome is delivered. We recommend that you take note of the contents and follow the instructions.



Some equipments listed in the Fiat user manual are not delivered in your motorhome (bulb box, warning triangles, ...), it is up to you to purchase the equipment.

For your information, the Fleurette plant in Benet (85) is a place dedicated to the production of motorhomes Fleurette / Florium. Only high-tech interventions are carried out by our Technical Service, only after an appointment agreed between your dealer and our after sales service.

Your dealer remains your main contact.

Instructions for use

Seatbelts:

Before use, you must fasten your seat belt. No changes should be made to the original system. Always use the same belt for one person and never hold a baby or child on your lap with your seat belt fastened. Replace your seat belts in case of deterioration. When putting in place back cushions, make sure to reposition the seat belt in order to use it properly.

The rear seats / facing the road are compatible with child seats approved "Universe1"

The rear seats are not suitable for attaching a child seat with ISOFIX attachments.

Authorized seats facing the road:

When driving, all passengers must be seated facing forward or on the 5th place opposite (see below). Some models of motorhomes Fleurette / Florium allow the transformation of their cushions to comply with this rule.



Original seat



Take out the cushions



Lift the back



Check the locking



Position the cushions

Use of motorhomes:

The motorhomes are designed for RECREATIONAL use and in no way intended to be used as a living space.

Fresh water capacity while driving:

Pay attention, some vehicles may be limited to respect your motorhome's maximum load limit.

Use of gas and safety

The gas installation complies with European Regulations 2001/56 / EC and 2004/78 / EG and the EN1919 standard. The bottles are placed in the external compartment provided for this purpose. This compartment has to be locked. The two bottles must be securely strapped.

A gas circuit control should be done every year by your distributor or an approved workshop.

A ramp of gas valves allows individual connection of each device.

- Taps located under the bed or in the sink cabinet = low profiles
- Taps located in the front compartment of the double floor = A-classes

Warning: the validity of the flexible supply hoses (rubber gas pipes) is 5 years. They have to be changed before the expiry date indicated on them.

Information on Fiat chassis

For all information concerning the original equipment of the vehicle, please refer to the car manufacturer's instructions Fiat and / or Alko. You will find instructions on the right tire pressure, wheel alignment, the engine battery, fuse positions...

For information, the wheel alignment is set by the chassis manufacturer before leaving the factory.

Warning: Our entire range is equipped with special tires for motor homes.

Safety instructions :

The existence of permanent upper and lower ventilation is essential in order to ensure constant air renewal. The ventilation devices should never be blocked.

Never leave children unattended in your motorhome.

Make sure you know the location and operation of emergency exits while leaving escape routes.

In case of fire:

Evacuate occupants

Shut off the gas bottles

Disconnect power

Give the alarm and call the fire department

Use a fire blanket or a fire extinguisher if you can do it securely

MOTORHOME MANNERS

The camper, used as a means of transport is likened to cars. It meets the traffic rules applicable to this category of vehicles.

In town centers or in urban areas, it is advisable to park in places:

- That are not densely populated
- That do not impair visibility, nor business
- Where the motorhome will not obstruct traffic

Likewise, when using a motorhome as accommodation in these places you must not:

- Spread to the area around the vehicle
- Cause inconvenience to residents
- Monopolise the public area
- Allow pets to run riot or disturb your neighbours

Wastewater disposal must take place:

- in appropriate places, never near housing, rivers, streams or crops.
- emptying "black water" (lavatory) into the rain water drainage system is strictly prohibited.

All water drainage valves must be closed whilst travelling. Even fresh water should be emptied discreetly, to avoid suspicion.

Household garbage must be placed in plastic bags and disposed in designated places.

By observing all of these common-sense rules, everyone can fully enjoy the many pleasures to be had by motorhome enthusiasts

Source : Comité de liaison du Camping-Car
3, Rue des Cordelières
75013 PARIS

MOTORHOME MANNERS

RESPECT is the name given to the charter of the good motorhome driver

R Respect nature

E Avoid grouping

S Park in the appropriate places

P Favor local trade

E Be courteous and discreet

C Communicate with others

T Keep all of these commitments

Source : UNIVDL

WATER AND GAS

Fresh water

Your motorhome is equipped with its own fresh water tank with a capacity of 120l or 150l or 300l according to the models. The tank should be filled with drinking water.

It is filled through an external nozzle fitted with a lock cap, located on the side of the vehicle. To open the cap, turn it counterclockwise to clockwise.

The inspection door of the fresh water tank is located on the ground under the living room or between the passenger seat and the tray.

A blue cap is opened or closed with hand. You can vent the tank via a sink plug placed in the tank with an access via the inspection door.

For models Mayflower 70LD, Magister 70LD and A-Classes under 3T, an handle on the fresh water tank allows to get a volume of 20 liters:

- Turn the valve $\frac{3}{4}$ turn in the opposite direction clockwise for 20 liters.
- Turn 2 turns in the opposite direction of clockwise to empty the tank.


Depending on the model the pump is located under the seat or under the bed.



Vanne 20l ou vidange



Water supply

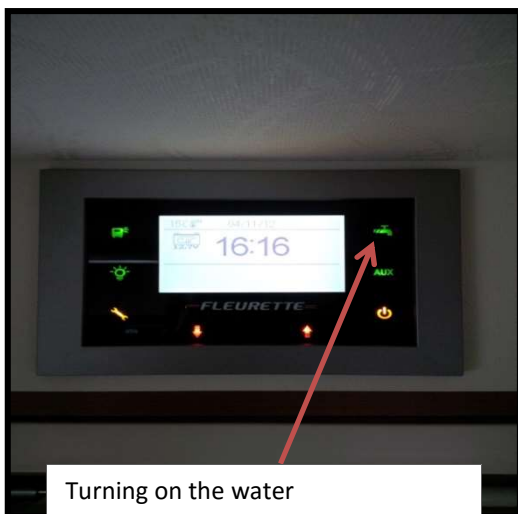

A switch on the control panel activates the water supply pressure.

(See instructions on the control panel in the white bag)

The pump sends water (see Nordelettronica instructions in the white bag) to the sink in the kitchen, washbasin in the bathroom, the shower and WC. Before opening a tap, make sure there is water in the water tank. If not used for a while, the pump works automatically to maintain pressure in the system.

The absence of water in the tank may damage the pump.



The boiler must be full to get hot water. Start the pump and open the hot water taps to actuate the valve to release the air. (Heating time= roughly 30mn)

The metallic filter should be cleaned at the beginning and end of each season.

To disassemble, purge the water system, unscrew the bell under the filter and get it out.

Go on tightening the bell by hand and check for leaks.



The expansion tank located under the kitchen or under the bed or under the seat (according to the model) should be emptied every year by draining the water circuit, tap opened, fresh water tank emptied and clean in FrostControl drain position (see Truma documentation).



Turning on the gas

Starting the system and change over DuoControl TRUMA :



- 1/ The bottles must be securely attached using the straps provided in the cupboard
- 2/ Check that the hoses are tightly connected to the flow regulators
- 3/ Open the valve of the bottle located in the cupboard
- 4/ Press the flow regulator reset (press the green dot)
- 5/ Actuate the switch in the cab
- 6/ Select the bottle with the DuoControl gas inverter
- 7/ Selector switch : one press, no pump, long press on the green dot (30 secondes for a complete opening of the complete mechanism) and progressive relaxation. Use a thin object for a maximum pressure.

The DuoControl gas inverter must select one bottle containing gas.

When the level of bottle 1 drops: gas is pumped simultaneously in bottles 1 and 2 and the selector displays both green / red lights on the selector switch.

When bottle 1 is empty : gas is pumped in bottle 2 only and the light is red on the system. At this time, the user can replace the bottle 1, without interruption of operation.

Your heater is equipped with the TRUMA FrostControl system. (See page 13 or refer to the manual of the device).

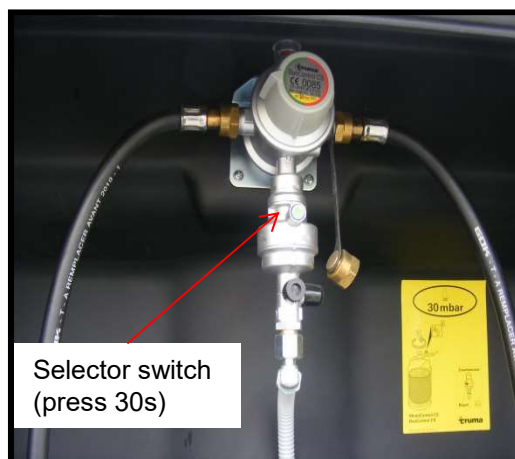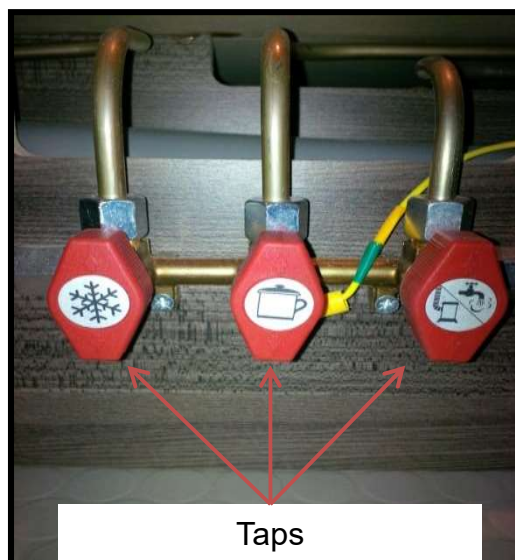



Heating system

The boiler is placed inside the motorhome under the seat or under the bed.

It is powered by gas and 220V depending on model. The Truma heating system is optimum for distribution of warm air through four warm air outlets. The Alde central heating system is a hydronic system, with the same heating principle as in most of our homes.

They are used both for heating and hot water production.



TRUMA heater

The Truma control panel is located near the main control panel to select the different modes. (See specific instructions)

ALDE heater

This boiler is powered by gas and electricity (220V).


The heat source comprises an LPG boiler with a 230-volt immersion heater, which heats a liquid mixture consisting of water and glycol. Hot glycol water circulates around the system through radiators and pipes by means of a pump. The pump speed is set to 1.

The heat is spread through the various grids placed across the cell.

An air blower located under the seat allows to accelerate the temperature rise in the cell. It can be controlled on the heating control panel

An interchange with the vehicle engine cooling system is installed to recover heat when the latter is in operation.

A stop valve allows to stop this function during the hot season. It is located in the engine on the right side behind the beam. The circuit is stopped when the stop lever is perpendicular to the pipe

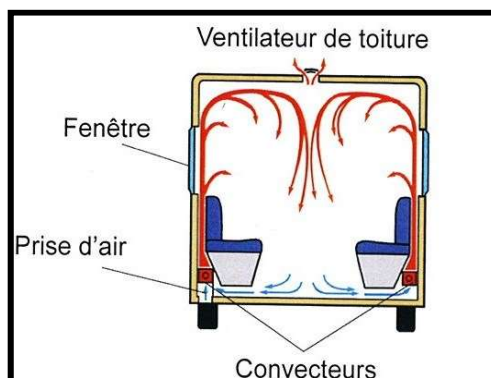

ALDE heater

A control panel is placed near the cell control pane. It allows you to configure the various settings. (Refer to ALDE manual)



The expansion tank is located in the wardrobe. The fluid level should be checked regularly.

Note: fill up to the "high" to limit the flow noise of the heat transfer fluid (automotive coolant) in the expansion tank. This noise can be further reduced by decreasing the speed of the circulator. This is adjustable in the control panel settings (see instructions ALDE)



Warning :

The air exchange grids have to be kept cleaned and not obstructed while the gas heater is working. In case of non-compliance with this instruction, the CO2 rate could increase and cause an accident.


The air intake and exhaust ducts of the burnt gas and the chimney have to be always opened and clean.

Do not spray water on the chimneys.

The vents must be opened and no objects should prevent warm air circulation.



Initially set the auxiliary circuit of the motorhome by activating this function on the control panel.

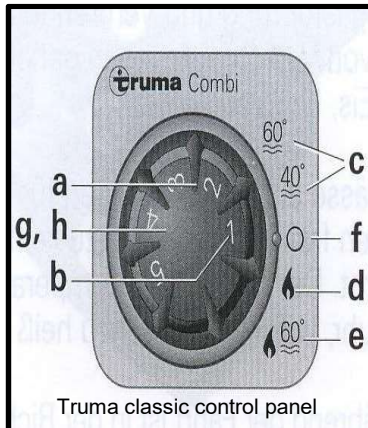

TRUMA HEATER : Combined heating system / water heater

A - Rotary switch (external ring) to adjust the room temperature (1-5)

B - Green LED functional display: operational, the timing to reduce the unit's temperature is activated

C - Water temperature : 40° or 60 °C

D – Without controlled water temperature

E- With controlled water temperature 60 °C

F - Off

G - Yellow or flashing LED functional display : = Heat-up phase warm water

H - Red LED functional display = Fault

For more information, refer to the specific manual

For models equipped with the boiler combi 6 E, we use a digital control panel (see specific Truma instructions)



Waste water

Waste water draining

The kitchen sink, the wash basin and shower are equipped with a siphon. Wastewater is collected in a tank on the back or front of the cell, with a capacity of 100L or 119L according to the models. Filling level is indicated on the control panel (display 1/3).

After turning off all power supplies, draining is done by turning the valve, easily accessible, located on the right side of the vehicle.

A trap door beneath the vehicle allows the inner tank cleaning.



Winterization

If your vehicle must remain stationary during the winter :

1/ Empty the freshwater and wastewater tank by activating the draining valve

2/ Drain the water heater, turn the pump on and open the hot water taps. Leave the mixer taps open in a central position and place the shower nozzle on the bottom of the shower tray

2/ Turn the pump on to drain the water from all the pipes in activating the Truma Frostcontrol Truma . Turn of 180 ° the drain controller. (See instructions for the device)

4/ Open the draining valves


5/ Open drainers of two tanks :

Fresh water : drain plug

Waste water : opened valve

6/ Open and clean the pump filter.

Warning: If temperature drops below 4 ° C in the cell, the safety valve / drain opens and drains the water heater. It is only when the ambient temperature is around 7 ° C that we can close the valve manually

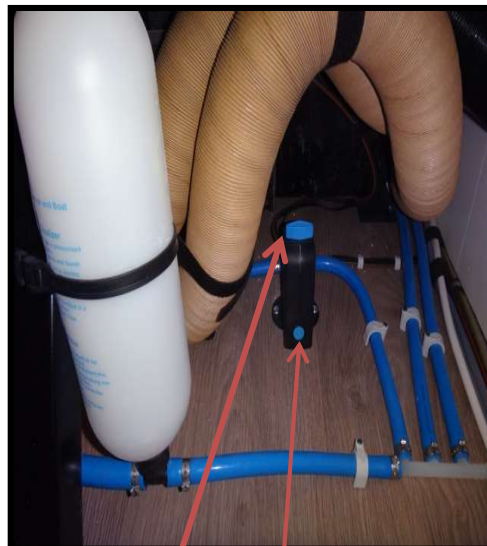


The inspection hatch is located under the bed or seats according to models
Opening / closing of the Truma FrostControl via the blue dot

To close the valve, turn the handle and press the blue dot.

Water levels

To know the amount of water in each tank, scroll the menu by pressing until these arrows appear ↓ ↑. Left tank is the fresh water tank. Right tank is the waste water tank.

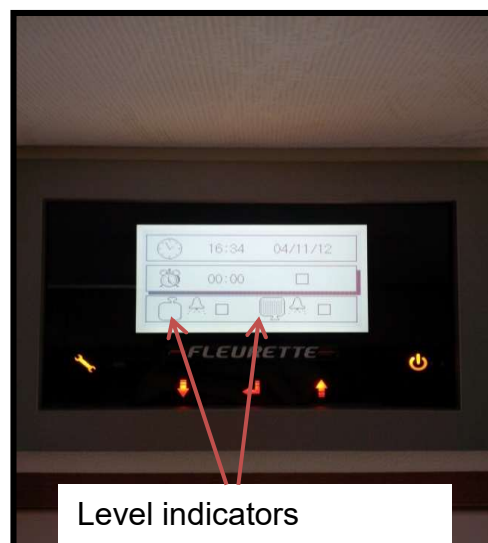

Level indicators

ELECTRICITY

12V and 220v

Electrical installations comply with required standards and regulations.

The power feed is made up of a 12V direct current part when the vehicle is on the road and of a 220V alternating current when you are connected to a plug.

Power is supplied via the standard plug P17 located on the side of your vehicle. It is recommended to use a patch cable 3 x 2.5 mm²) of maximum 25m.

Warning: Never start a vehicle connected to 230V


The electrical units are located under the front seat right or left depending on the model.

Your vehicle is equipped with a 230V circuit breaker that protects the electrical outlets, refrigerator, battery charger and the option Combi / Alde and a differential 30mA.


FUSES

12V electrical distribution is included in a 12V fuse box in which the fuses are located. This device distributes the power supplies of each cell unit.

Note: A low battery damage permanently the battery and electrical accessories of the vehicle. The Fleurette warranty can not be applied

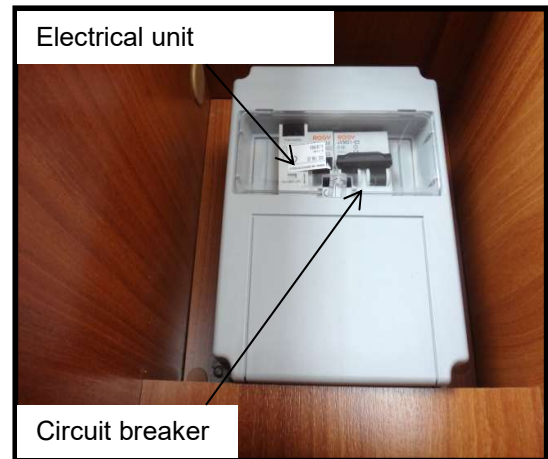

Fuse box:

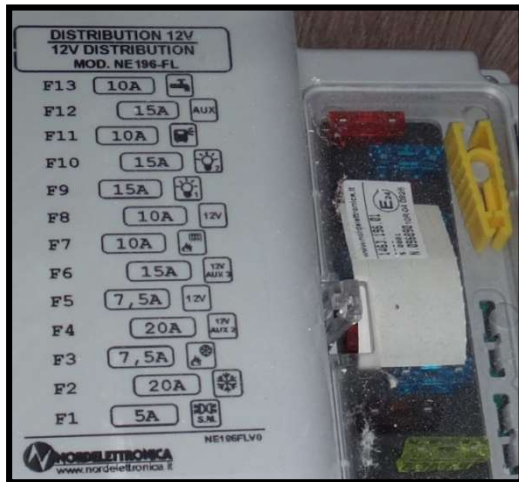

F1	5A	Side lights
F2	20A	Refrigerator power 12V
F6	15A	12V demo (TV furniture and radio)
F7	10A	12V television socket and motor of drop down bed
F8	10A	Pum and 12V socket under the seats
F9 F10	15A	Lighting circuit
F11	10A	Awning light (does not work when the vehicle is on the road)
F12	15A	Internal charger
F13	10A	Fresh water pump + WC



The battery charger 220V charges the auxiliary battery when the vehicle is powered by 220V (photo on the left). To load and complete filling of the battery, the red key cell circuit breaker must be removed (to do 1-2 times a year) – picture on the right.

Note: In this position, the cell is cut off from its power supply.

Auxiliary battery



It is placed under the seat, it feeds all the light points and the different devices. Its capacity is 100 amperes per hour. It recharges when the engine is started via the alternator or when the vehicle is connected to the 220V through the battery charger or a solar panel (optional) by the load limiter panel.

Check the battery voltage with the control panel

On A-Classes, the chassis12V frame is located under the passenger seat.

It has got 4 fuses:




25A	Drivers window
7.5A	Electrical mirrors right and left
2A	Side lights
1A	12 V after contact

Schéma de principe Raccordement Boitier Fusible 2015

Nota : (les raccordements à la masse ne sont pas représentés)
 Se reporter au livret NORDELETRONICA pour l'implantation
 Des connecteurs sur la carte électronique

12V box fuses supply diagram

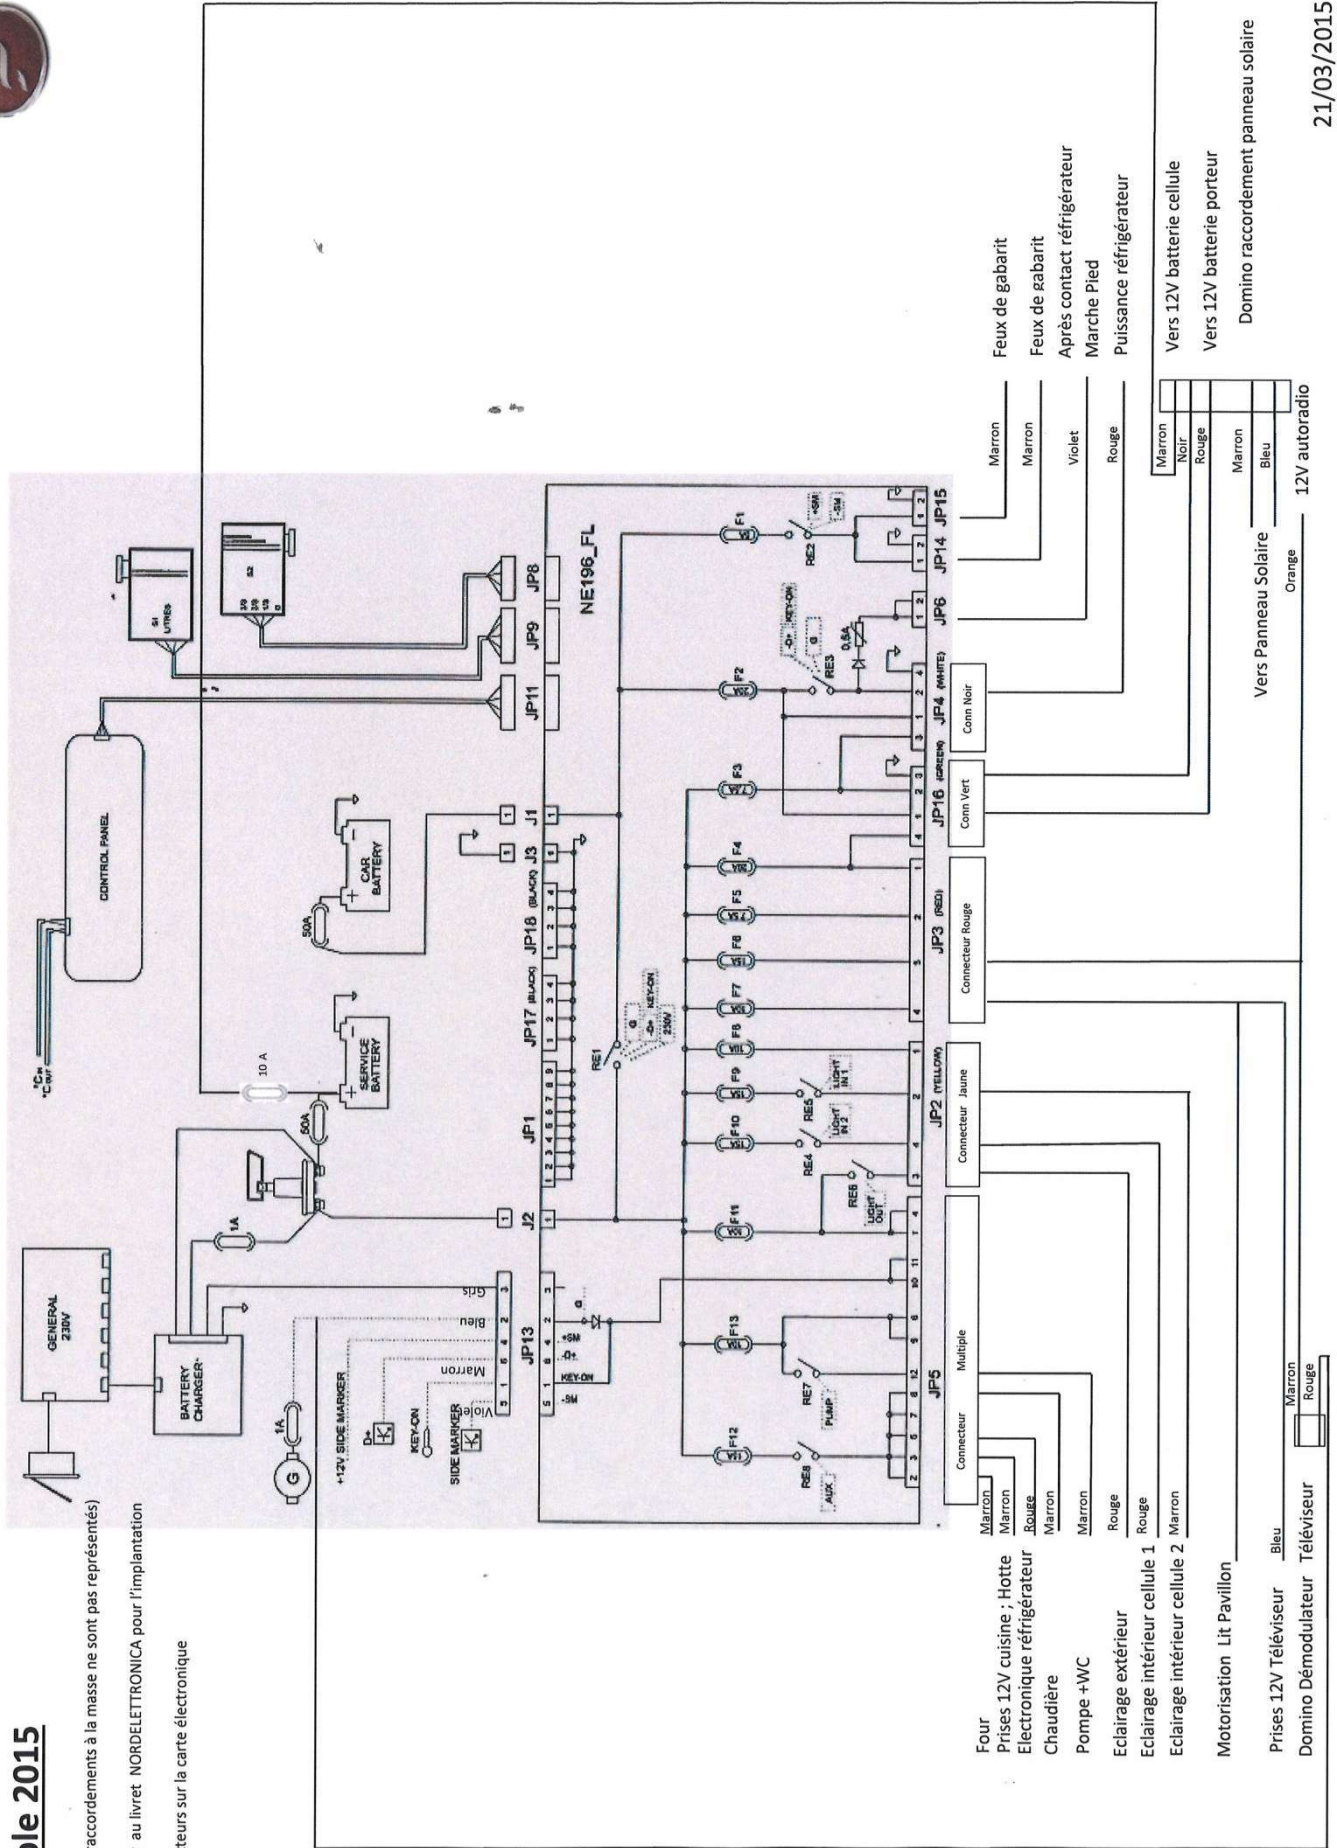

EQUIPMENTS

Hotplate:

Switching on : open the gas bottle and the button of the hotplate

Activate the auxiliary function of the control panel.

Press the button by turning it slightly to the left. Light with the electronic lighter, hold the button down for 10 seconds, then release.

Caution: Do not close the protective cover on a lit fire (risk of damage).



Extractor hood: Baraldi

To ensure proper operation of the extractor hood, the aluminium grease filter can be cleaned in the dishwasher.

Let the filter dry before reassembling

Refer to the device's manual (which is in the white bag delivered with your Fleurette)



Thetford WC

Motorhomes Fleurette / Florium feature a W.C. set consisting of a flush toilet and a cassette.

Refer to the device's manual (which is in the white bag delivered with your Fleurette)



Thetford refrigerator



Your refrigerator works by activating the function AUX on your control panel. For the proper functioning of your device, put it in 'Auto' mode because this function is the priority energy, refer to the instruction manual. The refrigerator automatically selects the best source available (in order: 220 V – gas – 12V)

Operating on 12V is only effective while the engine of the vehicle is running. The refrigerator uses gas when the engine is stopped and the power supply is not sufficient. **To secure optimal performance, level your vehicle before operating the refrigerator (the maximum inclination must be between -3 ° and 3 °)**



Refrigerator and oven – Tec Tower (Dometic)

Starting the refrigerator : by pressing the "MODE" button, you can select the desired energy source or let the automatic mode "AES" (recommended mode for better use). The AES mode automatically selects the best source available (in order: 220 V – gas – 12V)

IF THE FRIDGE FAILS TO WORK

Check the following points :

- The gas is propane
- That all LP-gas valves are opened
- That the safety switch is activated and the light is on
- The control panel
- That the fuse is intact
- The refrigerator is level.



Depending on the model of your motorhome, there are 2 types of oven, placed over the refrigerator or under the kitchen (Photo below)

For the second, be careful to remove the lock to the door. For ignition, firmly press the button to trigger the piezo ignition and turn the cooking power.

HEALTH RECOMMENDATIONS

Protection against the risk of food poisoning

When storing food, it is important to be aware of the specific operating conditions of a refrigerator installed inside a vehicle. There are conditions under which the appliance is unable to guarantee the necessary temperature to preserve some highly perishable items, because:

- when travelling, the refrigerator uses the 12V supply
- the vehicle's temperature may vary a lot depending on external climatic conditions
- the temperature inside a closed stationary vehicle, exposed to sunlight, may exceed 50°C/122°F
- you may need to use the refrigerator shortly after it reaches the optimum temperature



The following are considered as **highly perishable foodstuffs**: all products with a use-by date tied to a storage temperature equal to or below 4°C: meat, fish, poultry, cooked meats, pre-cooked dishes in particular.

Health recommendations

- Pack raw and cooked foods separately using aluminium foil or plastic wrap.
- Only remove the cardboard or plastic outer packaging if the useful instructions (use-by date, storage temperature, cooking instructions, etc.) are marked on the packaging directly in contact with the product.
- Do not leave refrigerated products too long out of the refrigerator.
- Place products whose use-by dates are the closest to expiring in the front of the others.
- Place any leftovers in sealed containers and eat them quickly.
- Wash your hands before touching food, after touching different products and before sitting down to eat.
- Clean the refrigerator regularly with soapy water. Rinse with a bleach solution.

The use-by date is written as follows: "Best before ...", followed either by the date or an indication of where the date is on the packaging.

THE FACILITIES

Pull-down bed

- 1/ Push the driver seat backs and the passenger seat backs forward (towards the front of the vehicle)
- 2/ Turn the key clockwise.
- 3/ Press the down button until the automatic shutdown
- 4/ You have a room sliding curtain in the ceiling;
- 5/ The light turns off automatically when the bed is raised;
- 7/ The lighting of the living room only works when the bed is on top. (Remember, if your mattress is too thick, it will prevent reaching the upper position and you will have no more room lighting).

Please read the user manual carefully




Flat screen sliding support17 ”



You can see on your left, the lock button. When you pull the lock button, you unlock the orientation of the screen

Sunroof

The existence of permanent upper and lower ventilation is essential in order to ensure constant air renewal. When driving, do not hide the skylight with its night curtain, the depression related to vehicle speed would aspire and distort the curtain. You should leave space as shown on the photo. The mosquito screen allows air to go through. This position is recommended when driving because it significantly reduces vehicle noise.

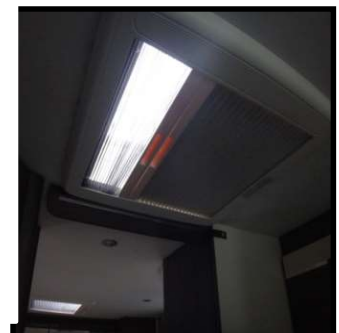

Dinette sleeping area on low profiles

To fit the living room as a bed, you have to remove the cushions delicately separating them from the Velcro that maintain them. Then set the table into low position by acting on the levers located under the table top. On some models under the seat, rotate the base plate, add the plank of wood (M67LG et M73LJ).



Wedges



Plank of wood



Night position



RADIO – GPS

Pioneer DEH-1300MP

A pre-installation of speakers is provided in your cell:

- In the right wardrobe room
- In the top left front cabinet
- Both cables are connected behind the control box

Refer to the instructions for the device for various settings.



Kenwood GPS

This is a navigation system with rearview camera.

Refer to the instructions for the device for various settings.



Compressor kit

Your motorhome is equipped with a compressor kit (see instructions inside the bag) as well as a tool kit under the passenger seat or the double floor door.



MAINTENANCE

Fabrics - curtains - cushions and leather

To ensure a longer life of your fabrics and cushions, we recommend you practice dry cleaning.

On leather, we recommend cleaning with specific products for leather or with a clean, damp sponge. It may be protected by regularly applying a skin cream.

Warning: Jeans may stain light leathers

If there are stains on curtains or cushions, use a mild stain type "Eau Ecarlate" or rinse with fresh clear water. First try on an hidden part.

The cabin sliding curtains should be cleaned periodically by hand to prevent mold

Hotplate, Sink

These should be cleaned with a stainless steel cleaner, non-abrasive, non-corrosive. It is important to dry them after each use to prevent the development of irreversible mark on stainless steel.

Windows and skyroofs

It is essential to pay attention to the products that you use when servicing acrylic windows.

We recommend the use of the following products:

- Cleaner (SEITZ) preventing the attraction of dust and crack formation
- A product polisher removing small scratches, dull tasks and streaks on the surface
- A soft cloth. Check with your dealer to order these products

Warning : Solvents or alcohol-based cleaners will immediatly damage the double glazing

Joints - jacks

The joints and fixtures must be cleaned with mild soap or dishwashing detergent on a damp sponge. Rinse well and wipe dry after cleaning.

Talcum powder or silicone spray should be used on the rubber seals.

The jacks can be cleaned with a dam cloth.

Drawers

Use a non-stick lubricant to clean the exterior slides of the drawers.

Furniture

Clean the furniture with household antistatic duster and a soft, dry cloth.

The work plan and table must be cleaned with a damp sponge and mild soap. After rinsing it is imperative to wipe.

Wood is a living material that reacts to different humidity conditions in a motorhome. Wood works with the change in humidity.

Bodywork and exterior

Regularly wash the bodywork and water. Only use soft sponges and cloths. Abrasive pads and detergents are prohibited.

Caution: Do not use abrasive products or the following products: acetone, solvent, oil, alcohol, ether, varnishes, solvent ...

Polyester body repair

In case of scratches or shock, polyester bodywork must be repaired with suitable products. **Warning: Do not use paint on a polyester bodywork.**

Stripes = polishing or application of Gel-Coat Fleurette then sanding and buffing

Shock or tear = fiberglass + polyester resin and Gel-Coat Fleurette, sanding and polishing

Safety checks before leaving

Some precautions are necessary to avoid any incident : Close the doors of wardrobe and bathroom, lock the cupboards, close all drawers, lock the refrigerator door, close the side windows and the rooflights. Do not leave items on the tables and kitchen work-surface.

Check that all the functions of the control panel are off (water pump for instance).

Outside, close the unit door, the side doors and the WC door.

Warning, you loose the warranty if you do not heed theses recommendations.



Pre-wiring for a rearview camera

A cable connects the location of the car radio to the vehicle rear (behind the stop light) for the future installation of a reversing camera.

Ask your dealer for installation.



Pre-wiring for solar panel

Cables are installed to connect a solar panel.

Ask your dealer for installation.

Towing ring (A-Classes)

You will find the ring in the toolkit.

Screw the towing ring on the tip at the left of the front bumper.



Window wash cap (A-Classes)

Access to the window wash cap is located under the front cover, top left.



WARRANTIES

Bodywork

5 year water ingress warranty without visit the 3 first years.

For the warranty work during these 5 years, a water test must be performed at the end of the 3rd year. A warranty certificate must be sent to us by your dealer.

FIAT Motor

To benefit from the Fiat warranty, you must return a copy of the registration card of the motorhome to your dealer. FLEURETTE agrees to send the information to the car manufacturer to activate the warranty

Contractual warranty: 2 years

Fleurette supplier

Warranty interior fittings : 2 years

Equipements warranty : Individual for each device (listed below)

1 year :

- Battery / Drain valve / Extrator hood / radio / Alde / Horrex equipments

2 years :

- Fuses box / battery charger / Gas reverser – Duo Control / Dometic

- Water pump / Control panel / Refrigerator / Truma

3 years :

- refrigerator aggregate / Thetford

WARRANTY SUPPORT EQUIPMENT

For appliances with their own manufacturer warranty (for instance : DOMETIC for refrigerator), please contact the representative of the brand nearest to your home.

Labor costs for the installation and removal of the devices are supported by FLEURETTE. These operations are performed by FLEURETTE dealers only.

LIST OF DEALERS
(France and Europe)

	Concessionnaires	Adresse	Téléphone	E-mail
06	MISTRAL LOISIRS	Parc d'Activité de la Roubine Chemin Levassor 06 210 MANDELIEU	04-93-90-28-98	contact@mistral-loisirs.com
11	CASTEL CAMPING-CARS	ZIC de Plaisance 11 100 NARBONNE	04-68-42-01-67	c.rapiteaux@tpl.fr
13	TPL AUBAGNE	31, Avenue de la Fleuride ZI les Paluds 13 400 AUBAGNE	04-42-72-17-64	aubagne@tpl.fr
14	HORIZON CAEN	361, Route de Bretagne 14 790 VERNON	02-31-26-72-06	estellecorre@horizoncaen.com
16	COCV ANGOULEME	RN 10 – Les Glamots 16 440 ROULLET ST ESTEPHE	05-45-21-72-72	contact.roullet@wanadoo.fr
17	LDL la Rochelle	Impasse du Soleil 17 138 PUILBOREAU	05-46-68-88-88	contact@lucas-diffusion.com
18	BOURGES CAMPING-CARS	Route d'Orléans / ZI RN 76 18 230 SAINT DOULCHARD	02-48-23-99-40	bourgescc@groupeevasion.fr
22	ETS JACQUELINE	ZI Les Vallées 22 640 PLENEE JUGON	02-96-34-32-98	michel.caravanes@orange.fr
26	ANDRIEUX CAMPING-CARS	ZI La Combelière 26 780 MALATAVERNE	04-75-50-05-04	andrieux.cca@orange.fr
29	BONJOUR CARAVANING	ZA de Kiella – rue de Domblans 29 590 LE FAOU	02-98-81-16-00	magasin29@bonjourcaravaning.fr
30	TPL NIMES	1520 Route de Nîmes 30 540 MILHAUD	04-66-29-78-24	nîmes@tpl.fr
31	TPL TOULOUSE	Route de Paris – RN 20 31 140 SAINT ALBAN	05-62-75-88-44	saintalban@tpl.fr
33	HORIZON BORDEAUX	ZA Mermoz 33 320 EYSINES	05-56-05-05-05	infos@horizonbordeaux.com
34	CASTEL CARAVANES	RN 113 34 740 VENDARGUES	04-67-91-20-80	cdv.vendargues@tpl.fr
35	OUEST EVASION	ZA de Beauséjour 35 520 LA MEZIERE	02-99-62-42-06	ouest-evasion@wanadoo.fr
37	CAMPING-CARS DE TOURAINE	RN 76 - BP 1 37 270 VERETZ	02-47-50-31-70	infos@campingcarsdetouraine.fr
39	JURA LOISIRS	RN 83 – Feschaux 39 570 LONS LE SAUNIER	03-84-47-23-32	juraloisir@wanadoo.fr
42	LOISIRS CONCEPT	ZI du Forum 42 110 FEURS	04-77-26-09-28	Loisirs.concept42@orange.fr
44	ATLANTIQUE CAMPING-CARS	RN 10 / ZA le Clair de Lune 44 360 ST ETIENNE DE MONTLUC	02-40-85-25-25	atlantiquecamping@gmail.com
47	AGEN ESPACE LOISIRS	Parc de Siailles RN113 47 240 CASTELCULLIER	05-53-95-15-15	didier.gouret@loisireo.fr
50	SOSSON EVASION	Zone d'activité 50 160 GUILBERVILLE	02-33-05-27-77	contact-sosson-evasion@orange.fr

LIST OF DEALERS

UK	Concessionnaire	Adresse	Téléphone	Adresse site internet + E-mail
56	ARC EN CIEL CAMPING-CARS	ZA de Pen Mané 56 520 GUIDEL	02-97-02-97-00	Arc-en-ciel-camping-cars@orange.fr
59	LESTRINGUEZ & FILS	Avenue de la République 59 113 SECLIN	03-20-35-25-99	v.dugoguet@lestringuez.com
59	LESTRINGUEZ & FILS	98bis rue Victor Watremez 59 157 BEAUVOIS EN CAMBRESIS	03-27-76-56-80	v.dugoguet@lestringuez.com
60	WATTELLIER	Centre Caravaning de l'Oise 60 600 ERQUERY	03-44-50-15-07	sas-wattellier@wattellier.com
63	EVASION 63	15 avenue de l'Europe 63 370 LEMPEDES	04-73-61-78-75	administratif@evasion63.com
64	TOP LOISIRS AGEST	Chemin des Trois Ponts 64 230 LESCAR	05-59-77-69-69	info@toploisirs.net
67	LOISIRS CAMPING-CARS	2 rue de l'artisanat 67 120 DUPPIGHEIM	03-67-07-00-61	loisirsc@me.com
69	CAMPING-CARS 69	174 route de Grenoble 69 800 SAINT PRIEST	04-78-90-37-72	contact@campingcar69.com
72	HUCHET LOISIRS	La Rembourgère 72 230 MONCE EN BELIN	02-43-21-60-75	huchetloisirs@wanadoo.fr
74	ISACAR	Route de Chamonix - RN 203 74370 CHARVONNEX	04-50-60-33-48	isacar-loisirs@wanadoo.fr
76	JOUSSE CARAVANES SERVICES	100 Rue Jehan Ango 76 520 – FRANQUEVILLE	02-32-94-51-30	jcommercial1.jousse@orange.fr
77	EVASION CAMPING-CARS	RN 3 Parie – Meaux 77410 CLAYE SOUILLY	01-60-26-28-39	sa.evasion@wanadoo.fr
80	BROUSSE LOISIRS	750 rue d'Abbeville 80 000 AMIENS	03-22-54-13-14	jb.ossart@brousseloisirs.com
85	LDL Benet	39, Route de Niort 85490 BENET	02 51 87 38 40	lucas-diffusion@wanadoo.fr
85	LDL La Roche Sur Yon	Parc de la Landette 8 rue Gutenberg 85 190 VENANSAULT	02-51-40-13-00	ldllaroche85@orange.fr
86	VIENNE AVENTURE	RN 10 19 avenue du cerisier Noir 86 530 NAINTE	05-49-23-40-72	vienneaventure@gmail.com
BE	LAMBRECHT MOTORHOMES	Aalterbaan 232 B 9990 MALDEGEM BELGIUM	0032- 50-71-91-84	info@lambrechtmotorhomes.be
NL	HEBO CAMPERS	Nering 4 NL 8355 DK GIETHOORN NETHERLANDS	0031-521-362- 427	info@hebotrading.nl
DE	REISEMOBILE HARTMANN	Im Geistwinkel 41 44534 LÜNEN GERMANY	0049-2306- 50411	info@reisemobile-hartmann.de
ES	GORBEA AUTOCARAVANING	C/ Tratado de Paris 19 Pol Industria E 01230 IRUNA DE OCA	0034-945-240- 417	administracion@caravaning-gorbea.com
UK	WEBBS MOTOR CARAVAN	Bath Road, Padworth Reading, West Berkshire RG7 5JF	0044 118 971 2424	www.webbsmotorcaravans.co.uk
UK	WEBBS MOTOR CARAVAN	Crusader Park, Bath Road, Warminster, Wiltshire BA12 8BT	00441985 212222	www.webbsmotorcaravans.co.uk

Have a good trip in your



motorhome

www.fleurette.fr – www.florium.fr

FLEURETTE SAS - 85490 BENET FRANCE